

Washing Machine

Quick instructions for daily use

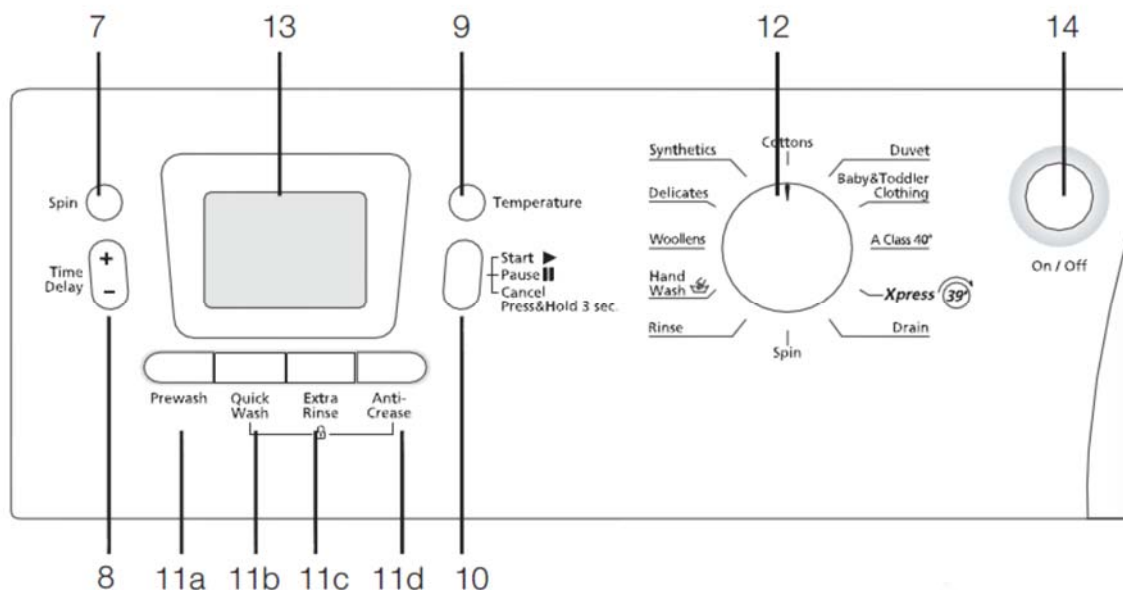


Figure 2

Preparation

1. Place the laundry in the machine and close the door.
2. Add detergent and softener.
 - Left hand compartment - main wash
 - Middle compartment – softener
 - Right hand compartment – pre-wash

Starting

1. Press the “On/Off” button (14 above)
2. Select the program (knob 12 above) and the temperature (press button 9 repeatedly to get to desired temperature).
Note: The fastest wash is the Xpress 39 program which is fine for lightly soiled clothes.
4. Press “Start/Pause/Cancel” button (10 above)
The display shows the time remaining for the program to complete if time delay is not set.
The display shows the time remaining for the program to start if the time delay is set.
5. Check if the Door Locked Symbol (Figure 3-13i) lights up on the screen.
The Door Locked Symbol (Figure 3-13i) will light up if time delay is not set.
The Door Locked Symbol (Figure 3-13i) will fade if time delay is set.

Cancelling a program

1. Press and hold the “Start/Pause/Cancel” button (Figure 2-10) for about 3 seconds; the Start symbol (Figure 3-13j) will start flashing.

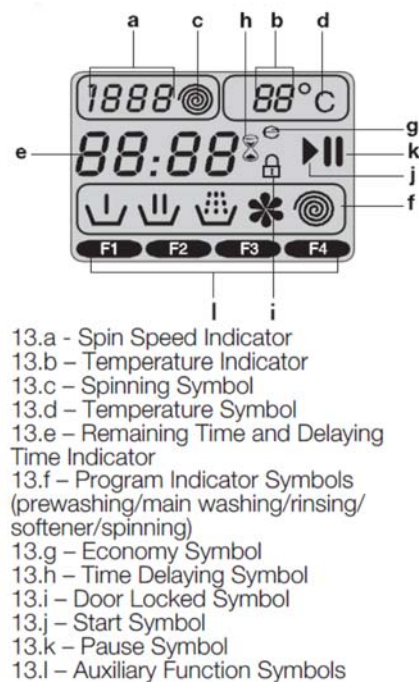


Figure 3

- 13.a - Spin Speed Indicator
- 13.b - Temperature Indicator
- 13.c - Spinning Symbol
- 13.d - Temperature Symbol
- 13.e - Remaining Time and Delaying Time Indicator
- 13.f - Program Indicator Symbols (prewashing/main washing/rinsing/softener/spinning)
- 13.g - Economy Symbol
- 13.h - Time Delaying Symbol
- 13.i - Door Locked Symbol
- 13.j - Start Symbol
- 13.k - Pause Symbol
- 13.l - Auxiliary Function Symbols

2. The machine can discharge all the water or can take in water for 3 times at most to cool down the clothes and complete discharging process.

Re-spinning the laundry

The control system for an unbalanced load can pause the spinning in cases when the distribution of the laundry in the drum is not balanced.

If you want to re-spin the clothes:

1. Distribute the laundry in your machine for a balanced load.
2. Select the spin program.
3. Adjust the spin speed.

After the program is finished

Program indicator symbols (Figure 3-13f) on the screen will remain lit after the program is finished. "End" will appear on the screen.

1. Open the loading door and take out the laundry when the door locked symbol on the display (Figure 3-13i) fades out.
2. Press the "On/Off" button (14).
3. Turn the water tap off.
4. Remove any folds in the rubber seal on the loading door and check for debris.
5. Leave the loading door and detergent drawer open to dry.