


Beko Washing Machine

Basic operation

4.3 Operating the product

4.3.1 Control panel

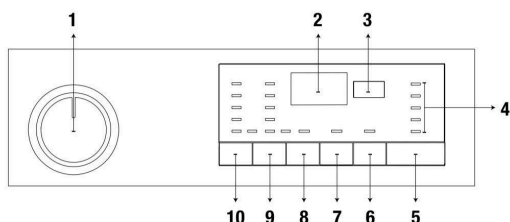

- 1 - Programme Selection Knob (Uppermost position On / Off)
- 2 - Display
- 3 - End Time Adjustment Button
- 4 - Programme Follow-up Indicator
- 5 - Start/Pause Button
- 6 - Auxiliary Function Button 3
- 7 - Auxiliary Function Button 2
- 8 - Auxiliary Function Button 1
- 9 - Spin Speed Adjustment Button
- 10 - Temperature Adjustment Button

Preparation

- Turn the power on at the switch on the wall above the machine.
- Place the laundry in the machine and close the door.
- Add detergent and fabric softener
 - a. Left hand compartment - main wash.
 - For powder detergent ensure blue flap at the back of the compartment is turned up
 - For liquid detergent ensure blue flap is turned down
 - b. Middle compartment - fabric softener
 - c. Right hand compartment - pre-wash

Starting

1. Turn the program selection knob to choose the wash program.
2. The wash temperature and spin speed can be adjusted using the buttons on the right hand display (this is not available for some wash programs).
3. The FAST button (6) at the bottom of the right hand panel can be used to shorten the wash cycle for certain programs.

Child Safety Lock

To activate the Child Safety Lock, press and hold the FAST button on the right hand panel for 3 seconds while the program is running. After the countdown, the display will briefly show 'Con'.

To deactivate the child lock repeat this process and after the countdown the display will briefly show 'Cof'. The child lock will automatically deactivate when the program selection knob is turned to the off position.

For further information on operation of the washing machine, the full User Manual is available on our website: <https://barcudlodgegower.co.uk/online-guest-folder/>